 
- Power +12v
- Ground
- EL Activation Button +12v
- Siren Activation Button +12v
- **EL Activation Rear**
- **EL Activation Front**
- Siren Activation Wail
- Siren Activation Yelp
- Siren Activation Hyper-Yelp
- Ground
- Not Used
- 12. Ground





## Siren / EL Signal Control Module

The Siren / EL Signal Control Module is a component that allows users to have the same touch and feel of the switching controls on a BMW RT-P. This module translates momentary +12v inputs from the siren and emergency light activation buttons to trigger +12v outputs to generic siren amp and emergency light flasher boards.

## **EL Activation:**

1<sup>st</sup> Press: activates front and rear emergency lights.

2<sup>nd</sup> Press: changes to rear lights only. 3<sup>rd</sup> Press: changes to front lights only.

Press and hold anytime to turn-OFF anytime.

## Siren Activation:

1<sup>st</sup> Press: activates wail tone. 2<sup>nd</sup> Press: activates yelp tone. 3<sup>rd</sup> Press: activates hyper-yelp.

Press & hold to turn-OFF anytime.

To create a momentary chirp, double-tap and hold.